# Ultimate 5th Wheel Connection - Gooseneck Mount INSTALLATION MANUAL

For Part #3220 / #3220-TBX and #3221 / #3221-TBX • 24,000 lbs GTWR - 4,500 lbs Tongue

**IMPORTANT! DEALER OR INSTALLER:** Please make sure your customer receives this manual for safety tips, warranty, and future removal or installation information



## **Table of Contents**

Important Safety Information	Page	2
Contact Andersen Hitches Customer Service	Page	2
Parts Illustration	Page	3
Section 1: Turning Clearance	Page	4
Section 2: Installing the Base Unit	Page	4
Section 3: Installing the Kingpin Coupler Block	Page	5
Section 4: Attaching the Remote Latch Cable Bracket	Page	7
Section 5: Connecting Your Trailer to the Base Unit	Page	8
Section 6: Removing the Base Unit	Page	9
Popular Add-ons for your Ultimate Connection	Page	10
Warranty Information	Page	11



### andersenhitches.com

Want to see a video of the install?



Use your Smart Phone to scan the QR Code above and to go to our Installation Videos on the web.





NOTE: THERE IS NEVER A NEED TO GREASE BALL OR COUPLER

Thank you for choosing the Ultimate 5th Wheel Connection! This indispensable product adapts a kingpin style 5th wheel trailer pin box so it can attach to a raised 2-5/16" ball hitch – giving you a smooth, solid and safe driving experience. The Ultimate Connection can be installed in a short amount of time with only a few tools.

When you unpack your Ultimate 5th Wheel Connection, compare it with the Parts List on Page 3. If any parts appear to be missing or damaged, DO NOT RETURN IT TO YOUR DEALER. Instead, contact us directly using the contact information below. If the packaging appears to be damaged, please include pictures of the packaging in your email. If you ever lose or damage any part of your Ultimate 5th Wheel Connection, visit **AndersenHitches.com** or contact **customerservice@anderseninc.com** for replacements.

Note: The Ultimate 5th Wheel Connection hooks to your current gooseneck ball and under bed system (we do not offer in-bed gooseneck balls or under bed systems). Please refer to the manufacturer's instructions regarding installation and use of your gooseneck system.



# IMPORTANT SAFETY INFORMATION



Read the entire manual before towing a 5th wheel trailer using the Ultimate 5th Wheel Connection.

Before each trip—and regularly during a trip—check all hardware, bolts and nuts for wear and fatigue, and make sure that they are all properly tightened and that all pins and clips are secured in place.



Make sure that you have enough clearance for your pin box so that it does not hit your truck when turning (see Section 1 and Section 3). As with any 5th wheel hitch, there is a point beyond which every trailer *will* contact the tow vehicle. Each trailer is unique, so become familiar with your specific vehicle/trailer limitations. When turning or reversing sharply in your tow vehicle, be very aware of the front corners and nose of your trailer so they do not hit the windows or cab of your tow vehicle.



Failure to follow all safety warnings could result in severe injury or even death.

Read and understand the manufacturer's instructions for your trailer, tow vehicle and hitching equipment. Follow all safety warnings, setup instructions and recommended maintenance before installing your hitch.

Before towing, make sure the kingpin coupler is coupled properly to the kingpin and to the Ultimate 5th Wheel Connection ball and that it is secured in place using the remote latch.

# ANDERSEN HITCHES CUSTOMER SERVICE


If you have a question, concern, or problem regarding your Ultimate 5th Wheel Connection, please contact our Customer Service team by scanning the QR code below or using the contact information provided.



www.AndersenHitches.com Customer Service: 1-800-635-6106 customerservice@anderseninc.com

#### The 3220, 3220-TBX and 3221 assemblies include all items listed on this page.

- The 3220 assembly is used for most standard truck installations.
- The 3221 assembly is a shorter version of the 3220 and is intended ONLY for flat-bed truck installations where the gooseneck ball is recessed below the bed.
- The 3220-TBX and 3221-TBX assemblies are designed for use in truck beds with a large fuel tank or toolbox.

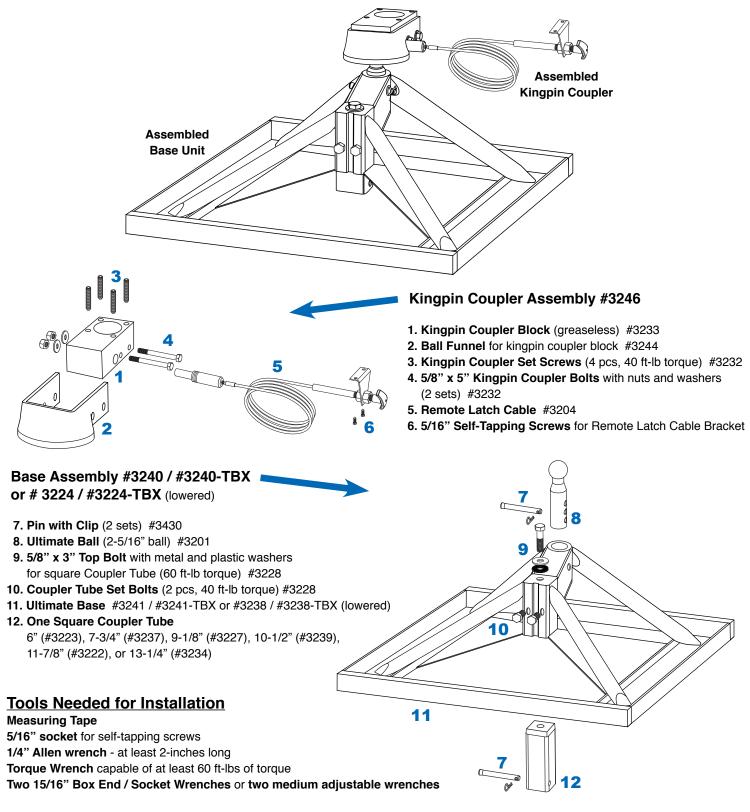


## **SECTION 1: TURNING CLEARANCE**

**WIPORTANT** As with any 5th wheel hitch, there is a point beyond which every trailer will contact the tow vehicle. Each trailer is unique, so become familiar with your specific vehicle/trailer limitations.

**1-1**. To figure your approximate turning clearance do the following: Using a tape measure, determine the distance of Measurement 1 on your Trailer (see diagram below). Next, determine Measurement 2 on the tow vehicle (see same diagram).

**NOTE:** If the coupler block is not installed, you can get an approximate idea for Measurement 1 by placing the tape measure on the center of the kingpin and then measuring the distance to the furthest corner of the trailer front end. If the base is not installed, Measurement 2 can be determined by measuring from the cab to the center of the gooseneck ball in the bed of the truck and then adding 5 inches to that number.

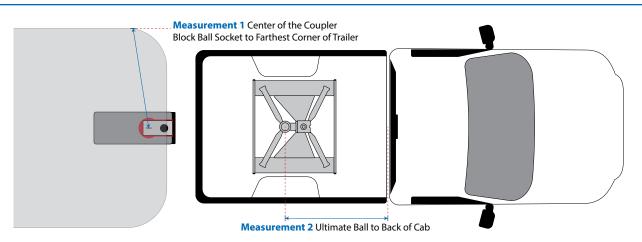

**1-2.** If Measurement 1 is SHORTER than Measurement 2 then you might be close to having perfect clearance. However, "perfect clearance" is not really necessary for 5th wheel trailer towing, most truck/ trailer combinations work great with 60°-70° turning clearance. If you want more details about turning clearance, watch the short video clip on our website at the link below (or scan the QR code).

#### Go to help.andersenhitches.com/install

...then click on the picture of the Ultimate 5th Wheel Connection to see a list of available videos




Use your Smart Phone to scan this QR Code and go to our Installation Videos page on the web.

# **SECTION 2: INSTALLING THE BASE UNIT**


**NOTE:** Before installation make sure that the gooseneck ball in the bed of the truck is in the up position and locked into place.



♦ IMPORTANT Ensure that the coupler tube set bolts are loose enough to allow free movement of the coupler tube.

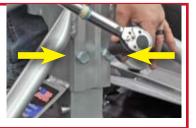

**2-1**. Place the Ultimate Connection base in the bed of your truck with the Ultimate Ball closest to the tailgate. You can use your bed grooves to square up the hitch before tightening it down.

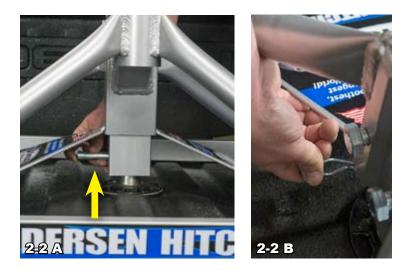


2-3


**2-2**. Place the pin through the lower coupler sleeve under the gooseneck ball and secure it in place with the hairpin clip. Push the entire base forward towards the cab of the truck until it will not go any further.

**2-3**. Using a 15/16" socket wrench, tighten the top bolt of the square coupler to <u>60 ft-lbs of torque</u>. This will ensure that the coupler is pulling up on the gooseneck ball and holding the Ultimate Connection firmly to the bed of the truck.

**2-4**. Using a 15/16" socket wrench, tighten the two coupler tube set bolts to approximately <u>40 ft-lbs of</u> torque to take out any play in the tube.

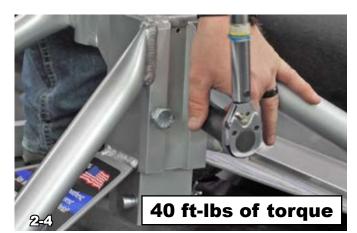

# **SECTION 3: INSTALLING THE KINGPIN COUPLER BLOCK**

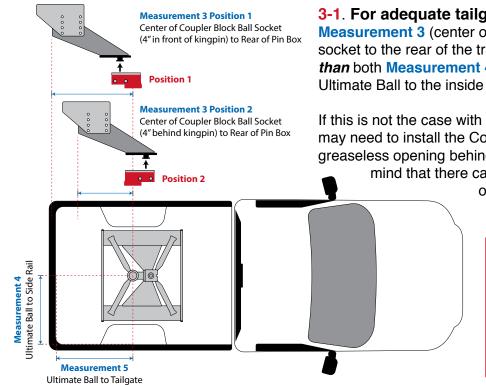

60 ft-lbs of torque

**3-1. For adequate tailgate and side rail clearance Measurement 3** (center of the installed Coupler Block's ball socket to the rear of the trailer's pin box) *should be shorter than* both **Measurement 4 and Measurement 5** (center of the Ultimate Ball to the inside of the side rails and tailgate).

If this is not the case with the coupler block in **Position 1**, you may need to install the Coupler Block in **Position 2** with the greaseless opening behind the trailer kingpin. Also, keep in

mind that there can be 15° up-and-down movement of the pin box, so be sure to allow for that above the tailgate and side rails.

#### IMPORTANT

When properly installed, the pin box should be able to rotate inside the bed of the truck. For longer pin boxes, **Position 2** installation provides better side rail clearance than **Position 1**.

Page 5 of 12 • Andersen Ultimate 5th Wheel Connection (Gooseneck Mount) Installation Manual 2-2018 • www.AndersenHitches.com







**NOTE:** Because kingpins vary in height, some blocks will have space between the coupler block and the kingpin plate (as shown at right) while others will be flush. This is normal and does not affect performance at all. **3-2**. Place the kingpin coupler block on the trailer kingpin with the greaseless ball socket face-down. Longer pin boxes may require installation of the coupler block with the greaseless opening towards the back of the pin box. **Do not attach the remote latch cable bracket yet.** 

3-3. Insert the two 5" long kingpin bolts into their holes to hold the coupler block on the kingpin and place the nuts on the two bolts as illustrated at left,
DO NOT tighten the nuts until step 3-6. Make sure the bolts are all the way flush to the block.

**3-4**. Make sure the coupler block is centered to the pin box.

**3-5**. Using a 1/4" allen wrench or allen wrench bit, tighten the 4 set screws to <u>40 ft-lbs of torque</u>.

**3-6**. Use wrenches to tighten the nuts on both kingpin bolts until they are <u>snug</u>. **Do not over tighten the bolts or it could result in cracking the red funnel.** 

**NOTE:** You *can* tow without the red funnel without affecting the performance of the hitch.





#### **SECTION 4: ATTACHING THE REMOTE LATCH CABLE BRACKET**

**NOTE:** We suggest installing the remote latch cable bracket at the back of the pin box brackets, as shown right. If this location does not work on your trailer, make sure that the latch cable bracket is installed securely and that the cable and bracket will not come in contact with the truck side rails.

**4-1**. Use a 5/16" socket to install the two self-tapping screws provided.

♦ IMPORTANT The remote latch cable bracket should be installed so that the cable does not have any sharp turns or kinks in it. This allows the cable to operate correctly and prevents it from binding. For best results, we suggest installing the latch cable bracket on the opposite side of the pin box from where the cable enters the coupler block. See our installation video online for further information.

**4-2**. Once installed, test the cable to ensure that the handle moves freely in and out. This will make sure that the pin attached to the kingpin coupler block is able to engage and disengage correctly.

#### Using the remote latch cable:

**To engage**, simply turn the handle to unlock it, push the handle until it's all the way in and then turn it fully in either direction to lock in place.

**To disengage**, turn the handle to unlock it, pull the handle until it's all the way out and then turn it fully in either direction to lock in place.

**NOTE:** Due to tight tolerances, if the trailer and tow vehicle are angled too much in reference to each other, the kingpin coupler block may not fully seat on the ball. This applies to uncoupling the kingpin coupler as well. If this occurs, the kingpin coupler block may become 'stuck' on the ball. To alleviate this problem, ensure that the truck and trailer are somewhat level in reference to each other. Raise the trailer up to clear the ball, disconnect your wiring harnesses and any safety cables and chains, then drive your truck out from under the trailer.









#### **SECTION 5: CONNECTING YOUR TRAILER TO THE BASE UNIT**

♦ IMPORTANT Before connecting the Ultimate Connection base to the kingpin coupler, make sure that the remote latch cable is pulled out to the open position. Failure to do so can result in the trailer not being secured to the Ultimate Connection base. It may also cause damage to the coupler assembly and/or Ultimate Ball.



Every time you connect a trailer to a tow vehicle using the Ultimate 5th Wheel Connection, you should make sure that all bolts are tightened to the proper torque specs. Additionally, **before each trip—and regularly during a trip—check all hardware, bolts and nuts for wear and fatigue.** 

**5-1**. With the latch in the open position, back the tow vehicle underneath the trailer until the Kingpin Coupler is directly above the Ultimate Ball.

**NOTE:** The red ball funnel that is part of your Kingpin Coupler allows you to easily hook up the Ultimate 5th Wheel Connection, even when up to 3" off center.

**5-2**. Lower the trailer until its full weight is resting on the Ultimate Ball, making sure that the ball is seated completely inside the coupler block's ball socket.

The height of the Ultimate Ball can be adjusted to allow for trailer leveling or to help with side rail clearance for longer pin boxes.

**5-3**. Secure the Coupler Block by pushing in the remote latch handle and then locking it in place by turning it a full 90 degrees in either direction.

♦ **IMPORTANT** DO NOT FORCE THE LATCH CABLE HANDLE INWARD. If the handle will not push in fully, check to make sure that the receiver is fully seated over the Ultimate Ball.







NOTE: THERE IS NEVER A NEED TO GREASE BALL OR COUPLER

#### **SECTION 6: REMOVING THE BASE UNIT**

# Before removing the base unit of your Ultimate 5th Wheel Connection, you will need to open the remote latch cable and disengage the kingpin coupler from the base unit.

Once your 5th wheel trailer is out of the way, you can remove the base and free up your truck bed.

6-1. Using a 15/16" socket wrench, loosen the two coupler tube set bolts. Make sure that the coupler tube set bolts are loose enough to allow free movement of the coupler tube.

**6-2**. Using a 15/16" socket wrench, loosen the top bolt of the square coupler. The Ultimate Base will now become loose in the bed of the truck, but it is **still connected to the vehicle's gooseneck ball.** 


**6-3**. Remove the hairpin clip from the pin under the gooseneck ball and then remove the pin from the coupler block, completely freeing the base from the tow vehicle's gooseneck ball.

**6-4**. Carefully remove the Ultimate Connection base from the gooseneck ball. You can now take the base out of the truck bed.







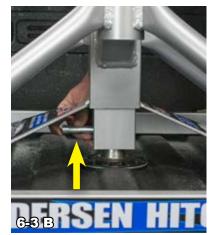



**Tip:** You can hang your Ultimate Connection on wall hooks when not in use.



#### **POPULAR ADD-ONS for your ULTIMATE 5th WHEEL CONNECTION**



Complete Ultimate Base Assembly Part #3240 / #3240-TBX or #3224 / #3224-TBX (lowered)

Do you use more than one vehicle for towing? No problem! Add an Ultimate Base Assembly to your other truck(s) to make hookups fast and easy!



#### Rail Mount Ultimate Base Part #3202

If one of your tow vehicles has rails instead of a gooseneck ball, we've got you covered! The Rail Mount Ultimate Base Assembly works with your current Kingpin Coupler Block.



#### Kingpin Coupler with Funnel Part #3246

If you have more than one 5th Wheel, that's no problem either! Just add an extra Kingpin Coupler to your other trailer(s) for fast and easy hook-ups!



#### Rota-Flex "Lockout" Kit Part #3247

If you are using an Ultimate 5th Wheel Connection with a Trailair Rota-Flex Pin Box, we suggest installing this lockout kit prior to installing the coupler block.



#### Long-Neck 2" Hardball Part #3665

This specifically designed hardball helps dealers move trailers equipped with the Ultimate Connection Kingpin Coupler Block without damaging the ball funnel.

#### **Ultimate 5th Wheel Connection Safety Chains**



Standard Safety Chain Kit Part #3230

Do you need safety chains to use with your Ultimate Connection? This kit includes everything you need for tow vehicles that have built-in safety chain hookups.



Safety Chain Kit with Plate Part #3249

Don't have safety chain hookups in your truck bed? Don't worry! Our safety chain plate installs over your gooseneck ball and provides a convenient hook up point.

# Warranty Registration and Validation

Andersen Ultimate Connection 5th Wheel Hitch

To register your Ultimate 5th Wheel Connection, simply visit www.AndersenHitches.com/register and complete your registration online.



If the original purchaser ("purchaser") or dealer (on behalf of an original purchaser) is denied written warranty coverage by an RV manufacturer, trailer-frame manufacturer or 'King Pin' manufacturer, because of purchaser's use of the Andersen Ultimate 5th Wheel Connection (gooseneck or rail mount), and it is shown that the warranty was properly and legally voided by manufacturer as a result of purchaser's use of the Andersen Ultimate 5th Wheel Connection, then Andersen Manufacturing (d.b.a. Andersen Hitches) will reimburse purchaser for any and all amounts that would have been covered by the manufacturer's original warranty, up to \$5,000,000 (five million dollars), and in such event, Andersen will also pay the purchaser an additional \$500 (five hundred dollars) for the inconvenience.

**Certain Requirements and Restrictions Apply**, scan the QR code at right or visit andersenhitches.com/Catalog/ultimate-connection-warranty.aspx and click on "\$5 Million Warranty" at the bottom of the page for more information.



#### Ultimate 5th Wheel Connection Limited Lifetime Warranty

**WARNING:** The weight ratings and certifications for the Andersen Ultimate 5th Wheel Connection are intended to represent only the product capability and in no way reflect the capacity or ratings of any towing system it is used with. In many cases, the rating of our hitch will be greater than those of the vehicle towing system, hitch, and trailer being used with our accessory. We strongly advise the consumer and operator to learn the ratings of the various components of the towing system and to NOT exceed the limits of the lowest rated component.

**LIMITED ONE YEAR WARRANTY:** Andersen Mfg. Inc. ("ANDERSEN") warrants to the original purchaser ("BUYER"), the Andersen Ultimate 5th Wheel Connection ("PRODUCT") against latent defects in materials and workmanship under normal use and service, rust, corrosion and ordinary wear and tear excepted, from the date of retail purchase for the ownership life of the original BUYER, subject to the limitations as set forth below.

If the PRODUCT is latently defective ANDERSEN will replace or repair the PRODUCT and/or associated parts when a proper Return Merchandise authorization (RMA) number is obtained by the BUYER, and the PRODUCT is returned with transportation charges prepaid to ANDERSEN manufacturing plant.

ANDERSEN shall not be required to replace or repair any items damaged as a result of improper installation, unauthorized alteration, unreasonable use, or improper maintenance including, without limitation, loading the PRODUCT beyond the PRODUCT's rated load capacity, damaged caused by an accident, sudden impact arising from a collision or other abnormal occurrences. BUYER is responsible for maintenance checks to the PRODUCT on a regular basis.

Since it is beyond ANDERSEN's control as to what trailers or vehicles the PRODUCT may be used with, and what condition said trailers or vehicles may be in, ANDERSEN will not warrant or assume liability for damages incurred. It is the responsibility of the BUYER to have the trailer braking system checked and maintained on a regular basis. ANDERSEN does not warrant against discontinuation of PRODUCT, acts of God, defects in items or components not manufactured by ANDERSEN, or against damages resulting from such non-ANDERSEN made products or components. ANDERSEN passes on to BUYER the warranty it received (if any) from the maker thereof of such non-ANDERSEN made products or components. This warranty also does not apply to PRODUCT upon which repairs have been affected or attempted by persons other than pursuant to written authorization by ANDERSEN.

THIS WARRANTY IS EXCLUSIVE. To the extent allowed by law, ANDERSEN shall not be liable for any incidental, consequential, or any other damages including, without limitation, breach of any implied warranty, merchantability, or fitness of the PRODUCT for a particular purpose. The sole and exclusive obligation of ANDERSEN shall be to repair or replace the defective PRODUCT in the manner stated above. ANDERSEN shall not have any other obligation with respect to the PRODUCT or any part thereof, whether based on contract, tort, strict liability, or otherwise. It is understood that the seller's liability, whether in contract, in tort, under any warranty, in negligence or otherwise, shall not exceed the return of the wholesale amount of the purchase price paid by the BUYER. Under no circumstances, whether based on this Limited Warranty or otherwise, shall ANDERSEN be liable for incidental, special, or consequential damages. The price stated for the PRODUCT is considered in limiting ANDERSEN's liability.

ANDERSEN's employees, representative's or Dealers ORAL OR OTHER WRITTEN STATEMENTS DO NOT CONSTITUTE WARRANTIES, shall not be relied upon by BUYER, and are not a part of the contract for sale or this limited warranty.

This warranty does not include labor charges nor does it include transportation charges for returning the PRODUCT to the consumer. Removal, shipping and installation of the replacement PRODUCT or replacement parts shall be at BUYER's expense.

Return Merchandise Authorization (RMA) and warranty procedure may be obtained by visiting Andersen's website at www.andersenhitches.com and clicking on 'Return Policy' at the bottom of the page, or by calling our customer service department at 1-800-635-6106.

# ANDERSEN HITCHES

# See our full line of towing products at www.AndersenHitches.com



Aluminum Rapid Hitch Greaseless & Standard 2" or 2-1/2" shank available



Ultimate Trailer Gear Duffel Bag The must-have 14-pc kit for all Trailers Kit includes 1 Rapid Jack (with rubber pad), 1 Clean Step, 2 Camper Levelers, 4 TUFF Pads, 4 TUFF Chocks and heavy-duty Duffel Bag!



EZ Adjust Hitch & EZ HD from 10K to 16K Heavy Duty 2", 2-1/2" or 3" shank available



Camper Leveler Level your trailer on the first try! Each kit includes chock and leveler



Andersen 'No Sway, No Bounce' Weight Distribution Hitch 2", 2-1/2" or 3" shank available



Trailer Jack Block Stabilize your RV or Trailer Attaches to Your Jacks with Magnets



